


READ INSTRUCTIONS BEFORE  
SETTING UP THE TENT

# EASYUP BEACH TENT

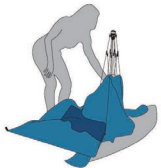


Lay the beach tent flat with easy-up hub upright. Make sure poles are fully extended and spread out.



Standing behind the tent, pull the two cords up and then away from each other.



Continue to pull the cords until the upper and lower sections of the tent connect. As the hubs get closer to connecting, the resistance will increase and the body of the tent will form. Once secure you will hear the easy-up hub "click" into place.

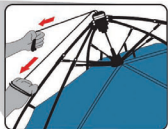

**IMPORTANT!** Once the easy-up hub is in place, tie the drawstring into a small bow. This will help prevent the possibility of the tent accidentally collapsing.



For security and stability, stake down the corners of the shelter to secure in place. Sand pockets can be filled for additional stability.


## SET UP

### TAKE DOWN


**WARNING:** Stand back when taking down the tent. The hub can pop up quickly.



Untie the cords and separate the easy-up hub by pushing down on the lower hub poles. The poles are marked by sticker that say "PUSH DOWN HERE"

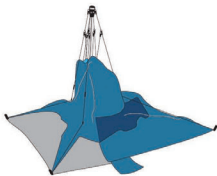


Gently lower down the entire easy-up tent.

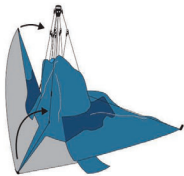

Holding the easy-up hub upright, fold fabric and poles inward towards the hub.

### PACKING THE TENT

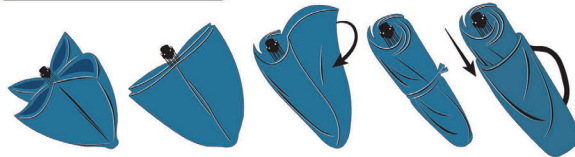

1. Fold the poles as shown
2. Lay the tent on its side. Gather all poles tightly to the hub to prevent pole damage.
3. Bring all excess fabric together and roll tightly towards the easy-up hub (Similar to closing an umbrella)
4. Use provided strap to tightly tie the rolled tent
5. Place the tent in the storage bag for extended storage

**WARNING:** KEEP BODY PARTS CLEAR OF POLE JOINTS DURING OPERATION.

**WARNING:** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. This tent is made of flame-resistant fabric. It is not fireproof. The fabric will burn if left in continuous contact with a flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

**WARNING**  
**KEEP ALL FLAME AND**  
**HEAT SOURCES AWAY**  
**FROM THIS TENT**  
**FABRIC**

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source.

The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

#### **EXTREME CAUTION**

Never use any fuel burning oxygen consuming devices or any devices that produce any fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This could result in carbon monoxide poisoning, injury and/or death.

MADE IN CHINA



## **WARNING**

### **THIS RECREATIONAL ITEM IS NOT INTENDED FOR USE AS A PERMANENT STRUCTURE**

This Tent/Shelter has been developed and is intended to provide protection from sun and light rain. DO NOT use any gas or flame sources under or near this product. This product is NOT WATERPROOF.

Excess water build-up can cause the frame system to become unstable, and collapse, causing injury. Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc. This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury. This product is not a toy. This product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings or similar valuables. Consumer-made modifications for extended use, i.e. permanently securing to decks and patios and/or Consumer's failure to follow stated guidelines, will invalidate any Eusebio Sporting Goods warranty, expressed or implied.

## **CARE & STORAGE**

Your product is NOT machine washable. Your product is NOT machine dryable.

One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts - steel, plastic, and fiberglass - before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.